

Exhibit 30 to the Olivia Weber Declaration

BROCADE® X7-8 DIRECTOR HARDWARE INSTALLATION GUIDE



Search this product



Introduction

This hardware installation guide contains procedures and safety requirements for installing your director into a r...

[VIEW ALL](#)

Device Overview

This device includes several key product features:

[VIEW ALL](#)

Preparing for the Installation

Perform these preliminary steps to ensure a successful installation.

[VIEW ALL](#)

Mounting the Device

You can install the device in several ways.

[VIEW ALL](#)

Initial Setup and Verification

Before connecting the device to the fabric, perform the following tasks to initially configure and set up the devi...

[VIEW ALL](#)

Installing Transceivers and Ca...

This device supports only transceivers that are qualified for Brocade products.

[VIEW ALL](#)

Monitoring the Device

The LEDs on the device indicate system activity and status. The power-on self-test (POST) performs diagnostic test...

[VIEW ALL](#)

Port and Extension Blades

This section describes the port blades and extension blades that are supported in your device and includes port nu...

[VIEW ALL](#)

Core Routing Blades

Core routing blades allow switching between the port blades.

[VIEW ALL](#)

Control Processor Blades

The control processor (CP) blade contains the control plane for the device and hosts the Fabric OS that manages al...

[VIEW ALL](#)

WWN Cards

The WWN cards store critical configuration data, such as WWN, IP addresses, part and serial numbers, and license l...

[VIEW ALL](#)

Power Supply Assemblies

This section describes the power supply assemblies that are supported by your device.

[VIEW ALL](#)

Fan Assemblies

Note these important details about fan assemblies.

[VIEW ALL](#)

Blade Filler Panels

Cover all empty slots with blade filler panels. Failure to do so will adversely affect device cooling.

[VIEW ALL](#)

Cable Management Comb

Use the cable management comb to organize and route cables attached to blade ports.

[VIEW ALL](#)

Chassis Door

The chassis door must be installed to ensure that the device meets EMI and other regulatory certifications.

[VIEW ALL](#)

Replacing the Chassis

Before replacing the chassis, you will need to remove all the blades and the FRUs, except the WWN cards, from the ...

[VIEW ALL](#)

Technical Specifications

The following tables highlight the features and specifications for the director.

[VIEW ALL](#)

Regulatory Statements

This section contains regulatory compliance statements for your device.

[VIEW ALL](#)

Cautions and Danger Notices

This section contains translations of safety notices for your product.

[VIEW ALL](#)

Revision History

[VIEW ALL](#) 

Copyright Statement

[VIEW ALL](#) 

[PRODUCTS](#) [SOLUTIONS](#) [SUPPORT](#) [COMPANY](#) [HOW TO BUY](#)

Copyright © 2005-2022 Broadcom. All Rights Reserved. The term "Broadcom" refers to Broadcom Inc. and/or its subsidiaries.

[Privacy](#) [Supplier Responsibility](#) [Terms of Use](#) [Sitemap](#)

